

# TRU

## SINGLE SERVING BREW SYSTEM



MODEL CM-1177/GR/RD/TQ  
INSTRUCTION MANUAL

# IMPORTANT SAFEGUARDS

When using electrical appliances especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. READ ALL INSTRUCTIONS.
2. Do not touch hot surfaces. Use any handles or knobs.
3. To protect against fire, electrical shock, or injury to persons DO NOT immerse cord, plug or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot food, hot oil, water or other hot liquids.
12. Do not use appliance for other than intended use.
13. To disconnect, turn Off, then remove plug from wall outlet.
14. Scalding may occur during brewing process if Brewer is not assembled or operated properly. Do not attempt to open the top cover during the brewing process or in the few seconds following the completion of brewing.
15. Fill the water reservoir of this appliance with water only. Do not fill with other liquids or foods, except when following the specific instructions in this guide for descaling or cleaning the machine.

## SAVE THESE INSTRUCTIONS

## BREW SYSTEM FEATURES



- 1. BREW CHAMBER RELEASE BUTTON
- 4. REMOVABLE DRIP TRAY
- 7. GROUND COFFEE BREW BUTTON

- 2. INTERCHANGEABLE BREW ADAPTER
- 5. FLIP-TOP WATER RESERVOIR

- 3. BREW SPOUT
- 6. CAPSULE BREW BUTTON

This appliance is for HOUSEHOLD USE ONLY. It may be plugged into an AC electrical outlet (ordinary household current). Do not use any other electrical outlet.

### **POLARIZED PLUG**

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

### **SHORT CORD INSTRUCTIONS**

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Extension cords are available and may be used if care is exercised in their use. If an extension cord is used,

1. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and
2. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

### **LINE CORD SAFETY TIPS**

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced.
5. Never wrap the cord tightly around the appliance, as this could place undo stress on the cord where it enters the appliance and cause it to fray and break.

DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

### **IMPORTANT**

During the first few minutes of initial use, you may notice smoke and/or a slight odor. This is normal and should quickly disappear. It will not recur after appliance has been used a few times.

**CAUTION:** There are two sharp needles that puncture the coffee capsules. One is located in the top cover and the other is in the bottom of the Coffee Capsule Holder itself. To avoid risk of injury, do not put your fingers in or near the Coffee Capsule Assembly Housing.

**CAUTION:** There is extremely hot water in the Coffee Capsule Holder during the brewing process. To avoid risk of injury, do not press the Brew Chamber Release Button or open the top cover during the brewing process.

### **UNPACKING:**

1. Carefully unpack the brewer and all parts. Remove any tape, labels or packaging materials.
2. Wash Water Tank Filter, Drip Tray, Drip Tray Cover, Coffee Capsule Holder and Brew Basket with warm, soapy water. Rinse well and dry thoroughly.
3. Wipe exterior surfaces of the product with a soft, moist cloth to remove dust particles collected during packing and handling. NEVER IMMERSE THE BREWER, CORD OR PLUG IN WATER OR ANY OTHER LIQUID.
4. Place Brewer on a solid, level, heat-resistant surface.

## **PREPARING FOR USE**

### **CLEAN THE SYSTEM:**

Before the first use, it is recommended to run a 14 Oz cycle of water through the Coffee Brewer.

1. Place the Water Tank Filter in the Water Tank.
2. Fill the Water Tank to the MAX level and close the lid.
3. Place the Brew Basket in place. DO NOT USE COFFEE GROUNDS.
4. Close the top cover on the Coffee Brewer.
5. Place a large on the Drip Tray and beneath the Brew Spout.
6. Plug the Coffee Brewer into an electrical outlet. Ideally, the Coffee Brewer should be operated on its own circuit, separate from other appliances.
7. Push the Ground Coffee Brew Button.
8. The Coffee Brewer will heat and then dispense the water.
9. After a preset time, the Coffee Brewer will shut off and is now ready for use.

## IMPORTANT

Please note the following accessories before operation.



Capsule Holder



Brew Basket

## BREWING COFFEE USING A COFFEE CAPSULE

1. Place the Coffee Brewer on a dry, level and heat-resistant surface.
2. Fill the Water Tank to the desired level from 6 oz to 14 oz according to the markings located on the Water Tank Filter. The recommended amount of water to brew a coffee capsule is 8-10 oz. **DO NOT** place any liquid other than water in the Water Tank.
3. Press the Brew Chamber Release Button on the front of the Coffee Brewer to release the top cover and Coffee Capsule Puncturing Mechanism.
4. Insert a coffee capsule into the Capsule Holder.  
**NOTE: Never remove or puncture the foil top of the coffee capsule before inserting into the Coffee Brewer.**
5. Close the top cover of the Coffee Brewer making sure it is completely closed. The coffee capsule will be punctured on the top and bottom allowing for the ideal flow of water during the brewing cycle.  
**NOTE: If the Top Cover is not properly closed, the Capsule Puncturing Mechanism will not lower and latch.**
6. Place a mug on the Drip Tray and under the Brew Spout.  
**TIP: Be sure to keep the mug in place at the end of the brew cycle to catch any excess drips. The end of the brew cycle is indicated when the function button is no longer blinking.**
7. Push the Capsule Brew Button. The brew cycle will now begin and the Capsule Button will flash throughout the brewing cycle.  
**TIP: To stop the brewing cycle at any time, press the flashing button.**
8. When the brew cycle is complete, the flashing button will stop and the Coffee Brewer will shut off.
9. Do not leave used coffee capsules in the Brewer. Wait for the Brewer to cool before removing used capsules as they remain hot following the brew cycle. Press the Release Button on the front of the Brewer, carefully remove the used capsule and discard. Lower the top cover.

## BREWING COFFEE USING COFFEE GROUNDS

1. Place the Coffee Brewer on a dry, level and heat-resistant surface.
2. Fill the Water Tank to the desired level from 6 oz to 14 oz according to the markings located on the Water Tank Filter. **DO NOT** place any liquid other than water in the Water Tank.
3. Press the Brew Chamber Release Button on the front of the Coffee Brewer to release the top cover.
4. Place coffee grounds into the Brew Basket. Never fill above the MAX marking on the Brew Basket.
5. Close the top cover of the Coffee Brewer making sure it is completely closed.
6. Place a mug on the Drip Tray and under the Brew Spout.  
**TIP: Be sure to keep the mug in place at the end of the brew cycle to catch any excess drips. The end of the brew cycle is indicated when the function button is no longer blinking.**
7. Push the Ground Coffee Brew Button. The brew cycle will now begin and the Ground Coffee Brew Button will flash throughout the brewing cycle.  
**TIP: To stop the brewing cycle at any time, press the flashing button.**
8. When the brew cycle is complete, the flashing button will stop and the Coffee Brewer will shut off.
9. Do not leave used coffee grounds in the Brewer. Wait for the Brewer to cool before removing used coffee grounds as they remain hot following the brew cycle. Press the Release Button on the front of the Brewer, carefully remove the coffee grounds and discard. Lower the top cover.

## USER MAINTENANCE INSTRUCTIONS

This appliance contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified service personnel if servicing is needed. The Brewer should be cleaned on a regular basis to prolong the life of the machine and to guarantee optimal brewing results.

### TO CLEAN:

- Turn off the Brewer and unplug from the wall outlet.
- On a regular basis, check the Drip Tray for excess water or coffee. Empty the Drip Tray and wipe it clean with a damp cloth. Use extra care when removing or emptying the Drip Tray, in order to prevent spilling any excess liquids from the Drip Tray.
- **DO NOT** leave used coffee capsules in the Capsule Holder.
- Wipe down the outside surfaces of the Brewer with a damp cloth and dry thoroughly. **NEVER** use harsh chemicals or abrasive cleaning pads. **NEVER** immerse the Brewer in water or any other liquid and **NEVER** place the appliance under running water.
- Clean the Water Tank Filter, Drip Tray, Drip Tray Cover, Coffee Capsule Holder and Brew Basket with warm, soapy water. Do not use

harsh chemicals or abrasive cleaners. Dry thoroughly prior to use. The Drip Tray, Drip Tray Cover, Coffee Capsule Holder and Brew Basket can be placed onto the top shelf of a dishwasher. Use low temperature cycles if cleaning the parts in the dishwasher.

### **DESCALING:**

It is advised to descale the Brewer on a regular basis. Frequency of descaling the Brewer depends on amount of use and your local water conditions. As a general time frame, the Brewer should be descaled every three months. Specific descaling products for coffee makers are available in stores and online.

**Follow the specific instructions for the descaling product on the package from the descaling product manufacturer.**

- Make sure the Brewer is turned Off.
- Fill the Water Tank with undiluted white vinegar or if using a descaling product fill according to the instructions on the package of the descaling product.
- Place a large mug on the Drip Tray and beneath the Brew Spout.
- Make sure there is not a coffee capsule in the Capsule Holder and close the top cover.
- To start the clean cycle, press both the Capsule Brew Button and the Ground Coffee Brew Button at the same time. They will illuminate. The Coffee Brewer will pump water and will pause in between cycles. The Coffee Brewer will run 5 cycles of approximately 30 seconds each cycle. After the 5 cycles are completed, the Coffee Brewer will automatically shut off.
- After allowing to sit, run another brew cycle without adding a coffee capsule. Empty the dispensed liquid that has accumulated in the mug. Use extreme caution as contents may be hot.
- Fill the Water Tank with 8 ounces of distilled or bottled water and run a full brew cycle.
- Run three additional brew cycles using distilled or bottled water, each time without a coffee capsule. This will clean the Brewer and get rid of any residual taste from the vinegar or descaler.
- The Brewer is now ready for regular use again.

### **TO STORE:**

- Be sure all parts are clean and dry before storing. Store appliance in its box or in a clean, dry place. Never store it while it is hot or wet. Never wrap cord tightly around the appliance; keep it loosely coiled.
- **ALWAYS** store the Brewer in an upright position, as a small amount of water may remain in the boiler.



## ONE YEAR LIMITED WARRANTY

SELECT BRANDS, INC. warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of one (1) year. SELECT BRANDS, INC., at its option, will repair or replace this product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, Select Brands, Inc. will repair or replace the same effecting all necessary parts replacements for a period of one year from the date of purchase.

Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

**CONDITIONS:** This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. This warranty does not apply to product sold by third party resellers. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centers, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty.

Warranty registration is not necessary to obtain warranty on Select Brands, Inc. products. Save your proof of purchase receipt.

**ABOUT YOUR PRODUCT WARRANTY:** Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

**NORMAL WEAR:** This warranty does not cover normal wear of parts or damage resulting from any of the following: Negligent use or misuse of the product; Improper voltage or current; Use contrary to the operation instructions; Deviation from instructions regarding storage and transportation; Repair or alteration by anyone other than SELECT BRANDS, INC. or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

SELECT BRANDS, INC. shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

**HOW TO OBTAIN WARRANTY SERVICE:** You must contact SELECT BRANDS, INC. Customer Service at 1-913-663-4500. A Customer Service representative will attempt to resolve warranty issues over the phone. If telephone resolution is not possible, the Customer Service representative will require your assistance in performing routine diagnostic procedures. This warranty is effective for the time periods listed above and subject to the conditions provided for in this policy.

To register this product and view other fine products, visit us online at [www.selectbrands.com](http://www.selectbrands.com)

**TRU™** is a registered trademark of Select Brands, Inc. 66219  
Made in China



