



Models CM-123CB/RD/GY/MG

SINGLE SERVE COFFEE MAKER

IMPORTANT SAFEGUARDS

When using electrical appliances especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. READ ALL INSTRUCTIONS.
2. Do not touch hot surfaces. Use any handles or knobs.
3. To protect against electrical shock, do not place cord, plug or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool completely before moving, putting on or taking off parts, or before cleaning.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil, water or other hot liquids.
12. Do not use appliance for other than intended use.
13. Do not set a hot mug on a wet or cold surface. Do not use a cracked mug or a mug having a weakened handle.
14. To disconnect, turn switch to OFF and then remove plug from outlet.
15. Scalding may occur if the lid is removed during the brewing cycle.
16. HOUSEHOLD USE ONLY.

SAVE THESE INSTRUCTIONS



This appliance is for HOUSEHOLD USE ONLY. It may be plugged into an AC electrical outlet (ordinary household current). Do not use any other electrical outlet.

DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Longer extension cords are available and may be used if care is exercised in their use. If an extension cord is used,

1. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and
2. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

LINE CORD SAFETY TIPS

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced.
5. Never wrap the cord tightly around the appliance, as this could place undo stress on the cord where it enters the appliance and cause it to fray and break.

BEFORE FIRST USE

IMPORTANT

During the first few minutes of initial use, you may notice a slight odor. This is normal and should quickly disappear. It will not recur after appliance has been used a few more times.

For your safety, always read and understand the Use and Care Manual before attempting to use any electric appliance.

BEFORE USING:

1. Wipe down the unit with a soft cloth or sponge. **Never immerse unit or cord in water or other liquid, and do not allow water to get into the unit.**
2. The filter basket and permanent filter are dishwasher safe. It is recommended to place them in the top rack only.
3. Pour up to 12 ounces of cool water into the water reservoir. **This coffee maker is inteded for brewing a 12 ounce cup of coffee.**
4. Place a mug on drip tray cover, plug unit into electrical outlet and switch ON by pressing the ON/OFF button.
5. Run one cycle with water only to flush the system.

OPERATING INSTRUCTIONS

NOTE: The amount of brewed coffee will measure slightly less than the original water due to absorption of water by the coffee grounds.

1. With power switch in the OFF position open the water reservoir lid.
2. Using a measuring cup, fill with the appropriate amount of cold water. There are water level markings on the inside of the water reservoir for 8, 10, 12, or 14 ounce cups. **DO NOT** exceed 14 ounces.
3. Pour the water into water reservoir.
4. Place the permanent filter into the filter basket, and add coffee grounds. Follow the recommended coffee to water ratio of the coffee manufacturer.
5. Gently shake filter to spread coffee grounds evenly.
6. Close lid.
7. Place a mug on the drip tray and press the power switch to the ON position.
8. Allow the coffee to finish dripping from the unit before removing the mug.
9. Press power switch to the OFF position when brew cycle is complete.

CAUTION: Be careful when opening the water reservoir lid after brewing as this area is hot and steam may be present.

CLEANING AND STORAGE

This appliance requires little maintenance. **To reduce the risk of electric shock, do not open or remove the bottom cover of unit.** It contains no user-serviceable parts. Do not attempt to repair it yourself. Any servicing that requires disassembly, other than cleaning, must be performed by a qualified appliance repair technician.

TO CLEAN:

At least once a month, fill the water reservoir with a mixture of 6 ounces of white vinegar and 6 ounces of cold water. Place a mug on the drip tray. Turn the power switch to the ON position to start the brew cycle. Allow all of the solution to drip into the mug. Repeat the process using a new solution; do not re-use the first solution. Allow the unit to cool for 10 min; then rinse unit by running another cycle with cool water only. You may have to run another rinse cycle to remove any remaining vinegar taste. Turn unit OFF and discard water. Wash and dry the permanent filter and filter basket. When unit has cooled, wipe with a dry cloth.

The permanent filter, filter basket and drip tray may be washed in warm, soapy water or on the top rack of dishwasher. Never use abrasive scouring pads or cleanser. Never immerse unit in water or any other liquid.

TO STORE:

Unplug unit; store in its box in a clean, dry place. Never store it while it is hot or still plugged in. **Never wrap cord tightly around the appliance.** Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

ONE YEAR LIMITED WARRANTY

SELECT BRANDS, INC. warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of one (1) year. SELECT BRANDS, INC., at its option, will repair or replace this product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, Select Brands, Inc. will repair or replace the same effecting all necessary parts replacements for a period of one year from the date of purchase.

Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

CONDITIONS: This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centers, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty.

Warranty registration is not necessary to obtain warranty on Select Brands, Inc. products. Save your proof of purchase receipt.

ABOUT YOUR PRODUCT WARRANTY: Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

NORMAL WEAR: This warranty does not cover normal wear of parts or damage resulting from any of the following: Negligent use or misuse of the product; Improper voltage or current; Use contrary to the operation instructions; Deviation from instructions regarding storage and transportation; Repair or alteration by anyone other than SELECT BRANDS, INC. or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

SELECT BRANDS, INC. shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

HOW TO OBTAIN WARRANTY SERVICE: You must contact SELECT BRANDS, INC. Customer Service at 1-913-663-4500. A Customer Service representative will attempt to resolve warranty issues over the phone. If telephone resolution is not possible, the Customer Service representative will require your assistance in performing routine diagnostic procedures. This warranty is effective for the time periods listed above and subject to the conditions provided for in this policy.

