



**MINNIE MUG WARMER**

**10 OZ. CERAMIC MUG INCLUDED**

*MODEL # DMG-18 INSTRUCTION MANUAL*

# IMPORTANT SAFEGUARDS

When using electrical appliances especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. READ ALL INSTRUCTIONS.
2. Do not touch hot surfaces. Surface will become warm. Handle by plastic sides only.
3. To protect against electrical shock, do not place cord, plug or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool completely before moving, putting on or taking off parts, or before cleaning.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, remove plug from wall outlet.
12. Extreme caution must be used when moving an appliance containing hot food, water or other hot liquids.
13. Do not use appliance for other than intended use.
14. Do not operate while unattended.

## SAVE THESE INSTRUCTIONS

## MUG WARMER FEATURES



1 10 oz Ceramic Minnie Mug

2 Warming Plate

3 Illuminated Power Button

This appliance is for HOUSEHOLD USE ONLY. It may be plugged into an AC electrical outlet (ordinary household current). Do not use any other electrical outlet.

**DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.**

A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply cord or extension cord is used,

- 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and
- 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

### **POLARIZED PLUG**

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

### **LINE CORD SAFETY TIPS**

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced.
5. Never wrap the cord tightly around the appliance, as this could place undo stress on the cord where it enters the appliance and cause it to fray and break.

## **IMPORTANT**

THIS PRODUCT IS NOT A TOY. For your safety, always read and understand the Use and Care Manual before attempting to use any electric appliance.

### **BEFORE USING:**

1. Carefully unpack the mug warmer. Remove all packaging materials, including those which may be inside the product.
2. Wipe exterior surfaces with a soft, damp cloth to remove dust particles collected during packing and handling. Dry thoroughly. Do not use abrasive cleaners. Clean the interior with a warm, soapy cloth. Rinse with a clean, damp cloth and dry thoroughly. **NEVER IMMERSE THE PRODUCT, CORD OR PLUG IN WATER OR ANY OTHER LIQUID.**
3. Included ceramic mug is both dishwasher and microwave-safe.

## **OPERATING INSTRUCTIONS**

1. Plug the warmer in and push the power button to turn on. The Minnie icon light will glow, letting you know the warmer is operating.
2. Place your cup on the warmer to maintain the perfect temperature for hot beverages or soups
3. **NOTE:** The warmer is not intended to heat cold liquids, only to maintain temperature.
4. **DO NOT use plastic, Styrofoam or paper cups on warmer. Be sure to switch product off when not in use.**

## **CLEANING AND STORAGE**

This appliance requires little maintenance. It contains no user-serviceable parts. Do not attempt to repair it yourself. Any servicing that requires disassembly, other than cleaning, must be performed by a qualified appliance repair technician.

### **TO CLEAN:**

**NEVER IMMERSE UNIT IN WATER OR ANY OTHER LIQUID.** Unplug appliance and allow to cool. Use a soft, slightly damp cloth to wipe the surfaces. **NOTE:** The included ceramic mug is dishwasher-safe.

### **TO STORE:**

Be sure all parts are clean and dry before storing. Store appliance in its box or in a clean, dry place. Never store it while it is hot. Never wrap cord tightly around the appliance; keep it loosely coiled.

# ONE YEAR LIMITED WARRANTY

SELECT BRANDS, INC. warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of one (1) year. SELECT BRANDS, INC., at its option, will repair or replace this product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, Select Brands, Inc. will repair or replace the same effecting all necessary parts replacements for a period of one year from the date of purchase.

Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

**CONDITIONS:** This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centers, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty.

Warranty registration is not necessary to obtain warranty on Select Brands, Inc. products. Save your proof of purchase receipt.

**ABOUT YOUR PRODUCT WARRANTY:** Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

**NORMAL WEAR:** This warranty does not cover normal wear of parts or damage resulting from any of the following: Negligent use or misuse of the product; Improper voltage or current; Use contrary to the operation instructions; Deviation from instructions regarding storage and transportation; Repair or alteration by anyone other than SELECT BRANDS, INC. or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

SELECT BRANDS, INC. shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

**HOW TO OBTAIN WARRANTY SERVICE:** You must contact SELECT BRANDS, INC. Customer Service at 1-913-663-4500 or online at [www.selectbrands.com](http://www.selectbrands.com). A Customer Service representative will attempt to resolve warranty issues over the phone. If resolution is not possible or effective, the Customer Service representative may require your assistance in performing routine diagnostic procedures. This warranty is effective for the time periods listed above and subject to the conditions provided for in this policy.

