

nickelodeon

nickelodeon
SPONGE BOB
SQUAREPANTS



MINI STIR POPCORN POPPER
MODEL NKL-60

Distributed by Select Brands, Inc. Lenexa, KS 66219

IMPORTANT SAFEGUARDS

When using electrical appliances especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. READ ALL INSTRUCTIONS.
2. Do not touch hot surfaces. Use any handles or knobs. Parts become hot during popping.
3. To protect against electrical shock, do not place cord, plug or popping base in water or other liquid.
4. Close supervision is necessary when any appliance is operated by or near children.
5. Do not leave appliance unattended while in use.
6. A popper that is plugged into an outlet should not be left unattended.
7. Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning and putting on or taking off parts.
8. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
9. The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electrical shock or injuries.
10. Do not use outdoors.
11. Do not let cord hang over edge of table or counter, or touch hot surfaces.
12. Do not place on or near a hot gas or electric burner or in a heated oven.
13. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
14. Do not use the appliance for anything other than its intended use.
15. To disconnect, turn all controls to OFF then remove plug from wall outlet.
16. This popper will not shut off automatically. To avoid overheating, add corn and oil before operating. DO NOT leave popper running after popping has ended.
17. Extreme caution must be used when unloading popcorn. When emptying the popper base, always turn the unit over a counter top so that residual hot oil or water running out will not cause burns.
18. Do not pop kernels without oil.
19. The popper pops using hot oil. Do not place shortening, butter, margarine, salts or seasonings in the popper base. Use of these will cause hazards and damage the popper.

SAVE THESE INSTRUCTIONS



STIR POPCORN POPPER FEATURES



- **Removable Vent Cover**
- **Power Switch**
- **Nonstick Heating Plate**
- **Measuring Cups Included**

This appliance is for **HOUSEHOLD USE ONLY**. It may be plugged into an AC electrical outlet (ordinary household current). Do not use any other electrical outlet.

DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply cord or extension cord is used,

1. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and
2. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

LINE CORD SAFETY TIPS

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

For your safety, always read and understand the Use and Care Manual before attempting to use any electric appliance.

BEFORE FIRST USE

THIS PRODUCT IS NOT A TOY. IT IS NOT INTENDED TO BE USED BY CHILDREN. For your safety, always read and understand the Use and Care Manual before attempting to use any electrical appliance.

1. Carefully unpack the popcorn popper and all parts. Remove all packaging materials, including any stickers or labels.
2. Hand wash the cover and lid in warm soapy water. **DO NOT SUBMERGE THE PLUG OR THE POPPER IN WATER OR ANY OTHER LIQUID.** Rinse and dry thoroughly.
3. To clean the interior and exterior surfaces of the popper, wipe and clean with a soft dry cloth. **NEVER IMMERGE THE POPPER OR CORD IN WATER OR ANY OTHER LIQUID.**
4. Position the popcorn popper on a dry, level, heat-resistant surface.
5. It is recommended to operate this appliance on a separate outlet and circuit from other appliances to avoid overloading the circuit.

HOW TO USE

1. Make sure the popper is unplugged, all switches are in the off position.
2. Remove plastic cover from the popping bowl. Set popping bowl aside.
3. Add 1 scoop of oil (1 tablespoon of vegetable, canola, corn, peanut or safflower oil) and 1 scoop of popcorn kernels (¼ cup). **NEVER** fill the popper with more than ¼ cup popcorn kernels.
4. Place the popping bowl on popping base.
NEVER pop corn with the plastic cover on the popping bowl.
5. Plug into a 120V outlet, preferably on a separate outlet from other appliances to prevent the circuit from being overloaded.
6. Turn the switch to the ON position. The stirrer will begin to rotate and popper base will begin to heat.
7. In a few minutes, the corn will begin to pop. Each batch will yield between 6 and 8 cups of popped popcorn.
8. When you no longer hear corn popping, the popping is complete. Turn the POPCORN switch to the OFF position and unplug. Place the plastic vent cover on the popping bowl before flipping. Carefully grasp the handles of the popping base and clear popping bowl at the same time. Flip over paying attention to hold top cover secure. Set bottom base aside and allow to cool.



9. Drizzle melted butter, sprinkle salts or seasonings over popped corn, if desired.
10. If popping multiple batches of popcorn, turn the POPCORN switch to OFF and allow unit to cool down for 3 to 5 minutes between batches.
11. When finished popping, turn the POPCORN to the OFF position. Unplug the popper from the wall outlet. Allow the popper to cool before cleaning the popper.

CLEANING AND MAINTENANCE

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself.

1. Before cleaning, turn the switch to the OFF position, unplug the plug from the wall outlet. Allow to cool.
2. Hand wash the bowl and lid in warm soapy water. **DO NOT SUBMERGE THE PLUG OR THE POPPER IN WATER OR ANY OTHER LIQUID.** Rinse and dry thoroughly.
3. To clean the interior and exterior surfaces of the popper, wipe and clean with a soft dry cloth. **NEVER IMMERSE THE POPPER OR CORD IN WATER OR ANY OTHER LIQUID.**
4. Never use abrasive cleaners or scouring pads to clean the popcorn popper, as those may damage the surfaces. Do not place any parts in the dishwasher.

To store, be sure all parts are clean and dry. Store appliance in its box or in a clean, dry place. Never store it while it is hot or wet. Never wrap cord tightly around the appliance; keep it loosely coiled.

HINTS AND SUGGESTIONS

- This popcorn popper will pop a variety of popcorn. The yield and popping time may depend upon what variety of corn is used. It is normal for popped corn and possibly unpopped kernels to remain in the popper after operation. This is caused by the differences in corn types, freshness or moisture content.
- Fresh popcorn kernels are best. Store sealed in a pantry or location free of moisture. Kernels that are refrigerated or frozen will be dried out and should not be used.
- In general, yellow corn pops larger than white corn.
- Some lighter weight kernels are not recommended for use in this popper. Always read the instructions from the corn manufacturer.
- NEVER use microwave popcorn kernels in this popper.
- For different tastes, try adding different seasonings, salts, spices, oils or even fresh grated Parmesan to popped corn. NEVER add these seasonings to the kernels before popping or to the popper.
- NEVER fill the popper with more than ¼ cup popcorn kernels.

ONE YEAR LIMITED WARRANTY

SELECT BRANDS, INC. warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of one (1) year. SELECT BRANDS, INC., at its option, will repair or replace this product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, Select Brands, Inc. will repair or replace the same effecting all necessary parts replacements for a period of one year from the date of purchase.

Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

CONDITIONS: This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. This warranty does not apply to product sold by third party resellers. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centers, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty.

Warranty registration is not necessary to obtain warranty on Select Brands, Inc. products. Save your proof of purchase receipt.

ABOUT YOUR PRODUCT WARRANTY: Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

NORMAL WEAR: This warranty does not cover normal wear of parts or damage resulting from any of the following: Negligent use or misuse of the product; Improper voltage or current; Use contrary to the operation instructions; Deviation from instructions regarding storage and transportation; Repair or alteration by anyone other than SELECT BRANDS, INC. or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

SELECT BRANDS, INC. shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

HOW TO OBTAIN WARRANTY SERVICE: You must contact SELECT BRANDS, INC. Customer Service at 1-913-663-4500. A Customer Service representative will attempt to resolve warranty issues over the phone. If telephone resolution is not possible, the Customer Service representative will require your assistance in performing routine diagnostic procedures. This warranty is effective for the time periods listed above and subject to the conditions provided for in this policy.

© 2018 Viacom International Inc. All rights reserved. Nickelodeon, Spongebob Squarepants and all related titles, logos and characters are trademarks of Viacom International Inc. Spongebob Squarepants created by Stephen Hillenburg.

Made in China

