

nickelodeon

TEENAGE MUTANT NINJA TURTLES™



WAFFLE MAKER

MODEL NTWM-43
INSTRUCTION MANUAL

Distributed by Select Brands, Inc. Lenexa, KS 66219

IMPORTANT SAFEGUARDS

When using electrical appliances especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. READ ALL INSTRUCTIONS.
2. Do not touch hot surfaces. Metal parts will become hot. Use any handles or knobs. Care must be taken, as burns can occur from touching hot parts or from spilled, hot liquid.
3. To protect against electrical shock, do not place cord, plug or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Do not leave appliance unattended while in use.
6. To disconnect, unplug from wall outlet.
7. Unplug from outlet when not in use and before cleaning. Allow to cool completely before moving, putting on or taking off parts, or before cleaning.
8. Extreme caution must be used when moving an appliance containing hot oil, food, water or other hot liquids.
9. Do not operate any electrical appliance with a damaged cord or plug or after appliance malfunctions or has been dropped or damaged in any manner. Return appliance to nearest authorized service facility for examination, repair or adjustment.
10. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electrical shock or injury.
11. Do not use outdoors or for commercial purposes.
12. Do not let cord hang over edge of table or counter, or touch hot surfaces.
13. Do not place appliance on or near a hot gas or electric burner, or in a heated oven or microwave.
14. Do not use the appliance for other than its intended use.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS

WAFFLE MAKER FEATURES



① *Cool Touch Handle*

③ *Non-stick Cooking Surface*

② *Illuminated Power Icon*

④ *Bakes One 7" Turtle Waffle*

This appliance is for HOUSEHOLD USE ONLY. It may be plugged into an AC electrical outlet (ordinary household current). Do not use any other electrical outlet.

CORD PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

LINE CORD SAFETY TIPS

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

A short power supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord. Extension cords are available and may be used if care is exercised in their use. If an extension cord is used:

- 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and
- 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

SAFE OPERATING PROCEDURES

- **THIS PRODUCT IS NOT A TOY. IT IS NOT INTENDED TO BE USED BY CHILDREN.** Close adult supervision is necessary whenever using this appliance with children present. For your safety, always read and understand the Use and Care Manual before attempting to use any electric appliance.
- This is a high wattage appliance and should be operated on a dedicated circuit.
- Solid surface countertops can be easily scratched, cracked, scorched, or damaged, especially when exposed to heat. To prevent damage, the following precautions should be observed when using this product:
 - Always use a trivet under heat generating sources such as Slow Cookers, Toaster Ovens, Skillets, etc.
 - Do not place hot pans, pots, ceramic or stoneware inserts, etc. directly on the countertop surface.
- The outer surface and cooking plates of the appliance may be very hot when operating.
- Do not lean or stand over the waffle maker when opening the lid as steam may be released.
- Do not operate the waffle maker with the lid open.

HOW TO USE

BEFORE USING:

1. Carefully unpack the waffle maker. Remove all packaging materials, including those which may be inside the product.
2. Wipe exterior surfaces with a soft, damp cloth to remove dust particles collected during packing and handling. Dry thoroughly. Do not use abrasive cleaners. Clean the interior with a warm, soapy cloth. Rinse with a clean, damp cloth and dry thoroughly. **NEVER IMMERSER THE PRODUCT, CORD OR PLUG IN WATER OR ANY OTHER LIQUID.**

USING THE WAFFLE MAKER:

1. Place the waffle maker on a flat, level, heat-resistant surface.
2. Plug the power cord into a 120V AC electrical wall outlet. The power light will

illuminate and will remain illuminated until the power cord is unplugged from the outlet.

3. Lightly glaze both cooking plates with a small amount of vegetable oil or a non-stick spray, close the top to allow the waffle maker to heat.
4. After approximately 3-5 minutes the waffle maker will have reached the proper cooking temperature and is ready for use.
5. **CAUTION:** Waffle maker is **HOT**. Use oven mitts. Open the top lid using the handle and avoid making contact with hot surfaces. To avoid accidental burns or contact with the hot surfaces or steam being released while cooking, always open and close the lid using oven mitts and by the handle.
6. Slowly pour batter into the lower cooking plate starting from the middle and working outward. Make sure all of the small details are filled with batter. Use caution not to overfill.
7. Lower the lid and allow the food to cook. Cooking time will range between 3 and 6 minutes depending on ingredients and personal preferences.
8. When waffle is cooked to desired brownness, unplug the power supply cord from the outlet. Carefully open the lid using oven mitts. Do not lean or stand over the waffle maker when opening the lid as hot steam may be released.
9. Remove finished waffles from the cooking plates with a heat-resistant plastic utensil (non-metallic). Use **CAUTION** when handling the waffles, as they will be **HOT**. Allow waffles to cool for a few minutes before enjoying.
10. Make sure the waffle maker is completely cool before moving or storing.

CARE AND CLEANING

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified personnel if servicing is needed.

To Clean: Always unplug the appliance from the power source and wait until it cools down before cleaning. There is no need to take the appliance apart for cleaning. Dry with a paper towel to absorb excess oils. Brush crumbs from the cooking plates and wipe with a damp cloth and mild soap. Never immerse in water. Avoid using sharp utensils, as they will scratch the surfaces. Do not use cleansers or oven cleaners on the cooking plates. To clean the exterior, use a damp cloth with mild soap and towel dry.

To Store: Unplug the appliance and store in its box or in a clean, dry place. Store the cord loosely coiled; never wrap the cord tightly around the unit. Do not put stress on the cord where it enters the appliance, as it could cause the cord to fray and break.

WAFFLE BAKING HINTS AND SUGGESTIONS

- When preparing the waffle batter, do not over-mix it or the waffle will become tough and heavy. A few lumps in the batter are OK.
- Refrigerated batter may need some water or milk added to the mixture, as cold batter can thicken. Cold batter may also require a longer cooking time to reach the desired doneness.

- Use a heat-proof rubber spatula or the bottom of a non-metallic ladle or non-metallic spoon.
- Do not overfill the waffle grids. The batter should almost cover the peaks of the waffle grids. Use a pitcher or measuring cup to pour the batter in the larger areas and a ladle or spoon for the smaller areas.
- Cake-based waffles, such as dessert-type waffles, will be more fragile and you will need to use more care in removing them from the waffle maker.
- Close the waffle maker lid immediately after removing a waffle to maintain the proper cooking temperature for additional waffles.
- Baked waffles will accumulate steam between them and lose their crispness if stacked or cooled on a solid surface. For best results, move waffles to a wire cooling rack and do not stack.
- Finished waffles may be kept warm by placing them directly on the rack in a 200°F oven for up to 15 minutes.
- Waffles may also be warmed by placing them into the preheated waffle maker for 1 to 2 minutes.
- Baked waffles freeze well. Cool completely on wire rack. Store in plastic freezer bag or in covered container, separating waffles with wax paper. Reheat frozen waffles until hot and crisp.

RECIPES

CLASSIC BUTTERMILK WAFFLES

Ingredients:

2 cups all-purpose flour	3 eggs, beaten
½ teaspoon baking soda	2 tablespoons unsalted butter, melted
1 teaspoon baking powder	2 cups buttermilk
1 teaspoon salt	
¼ cup sugar	

Directions:

1. Preheat waffle maker.
2. In medium sized mixing bowl whisk together flour, baking soda, baking powder, salt and sugar.
3. In separate bowl, beat together eggs and melted butter. Add buttermilk.
4. Add wet ingredients to the dry ingredients and stir until combined.
5. Allow to sit for 4 to 5 minutes.
6. Add waffle batter to the waffle maker and close the lid.
7. Bake between 3 and 5 minutes, using a toothpick to check that the waffle is thoroughly cooked.

CINNAMON WAFFLES

Ingredients:

1 cup all-purpose flour	2 eggs, separated
½ teaspoon baking soda	4 tablespoons unsalted butter, melted
1½ teaspoons baking powder	1 cup buttermilk
½ teaspoon salt	2 teaspoons vanilla extract
1½ tablespoons sugar	
¼ to ½ teaspoon cinnamon	

Directions:

1. Preheat waffle maker.
2. Separate eggs yolk from egg whites. Set aside egg whites.
3. In medium sized mixing bowl whisk together egg yolks, vanilla, buttermilk, and butter until consistent.
4. In separate bowl, mix together dry ingredients.
5. Add wet ingredients to the dry ingredients and stir until combined.
6. Whip egg whites until they just begin to peak. Fold into waffle mixture.
7. Add waffle batter to the waffle maker and close the lid.
8. Bake between 3 and 5 minutes, using a toothpick to check that the waffle is thoroughly cooked.

CHOCOLATE WAFFLES

Ingredients:

1 cup all-purpose flour	2 eggs, lightly beaten
1 teaspoon baking powder	4 tablespoons unsalted butter, melted
½ teaspoon salt	1 cup buttermilk
1 cup sugar	2 teaspoons vanilla extract
½ cup unsweetened cocoa	

Directions:

1. Preheat waffle maker.
2. In medium sized mixing bowl combine flour, baking powder, salt, sugar and cocoa.
3. Add the eggs, buttermilk and vanilla and whisk until consistent.
4. Gradually add the melted butter, whisking until smooth.
5. Add waffle batter to the waffle maker and close the lid.
6. Bake between 3 and 5 minutes, using a toothpick to check that the waffle is thoroughly cooked.

TIP: Serve warm with ice cream and toppings.

ONE YEAR LIMITED WARRANTY

SELECT BRANDS, INC. warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of one (1) year. SELECT BRANDS, INC., at its option, will repair or replace this product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, Select Brands, Inc. will repair or replace the same effecting all necessary parts replacements for a period of one year from the date of purchase.

Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

CONDITIONS: This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centers, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty.

Warranty registration is not necessary to obtain warranty on Select Brands, Inc. products. Save your proof of purchase receipt.

ABOUT YOUR PRODUCT WARRANTY: Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

NORMAL WEAR: This warranty does not cover normal wear of parts or damage resulting from any of the following: Negligent use or misuse of the product; Improper voltage or current; Use contrary to the operation instructions; Deviation from instructions regarding storage and transportation; Repair or alteration by anyone other than SELECT BRANDS, INC. or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

SELECT BRANDS, INC. shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

HOW TO OBTAIN WARRANTY SERVICE: You must contact SELECT BRANDS, INC. Customer Service at 1-913-663-4500. A Customer Service representative will attempt to resolve warranty issues over the phone. If telephone resolution is not possible, the Customer Service representative will require your assistance in performing routine diagnostic procedures. This warranty is effective for the time periods listed above and subject to the conditions provided for in this policy.

To register this product and view other fine products, visit us online at www.selectbrands.com

© 2016 Viacom International Inc. All Rights Reserved. Nickelodeon, Teenage Mutant Ninja Turtles and all related titles, logos and characters are trademarks of Viacom International Inc.

Made in China
032316