



CORDLESS
COLLECTION



CORDLESS HAND MIXER

INSTRUCTION MANUAL

RC-400HM

IMPORTANT SAFEGUARDS

When using electrical appliances especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. READ ALL INSTRUCTIONS.
2. To protect against fire, electrical shock, or injury to persons DO NOT put charger cord, plug or appliance in water or other liquid.
3. This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance.
4. Slide speed control to 0 (Off) and unplug charger from outlet when not in use, before putting on or taking off parts, and before cleaning. To unplug the charger, grasp the plug and pull from the outlet. Never pull from the power cord.
5. Avoid contacting moving parts.
6. Do not operate or charge the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact the manufacturer at their customer service telephone number for information on examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury.
8. Do not use outdoors.
9. Do not let charger cord hang over edge of table or counter or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Keep hands, hair, clothes and utensils away from the beaters and out of the container while mixing to prevent the possibility of severe injury to persons or damage to the unit.
12. To disconnect, turn speed control to the 0 (Off) position.
13. Keep fingers away from the speed control while inserting or removing beaters. The mixer will operate if the speed control is pushed forward.
14. Do not use appliance for other than intended use.
15. Remove beaters from mixer before washing.
16. Do not use an extension cord. Plug charger directly into an electric outlet.
17. Use only with the charger provided with the appliance. Do not attempt to use this charger with any other product. Likewise, do not attempt to charge this appliance with any other charger.
18. Do not incinerate this appliance even if it is severely damaged. The batteries can explode in a fire.

SAVE THESE INSTRUCTIONS

This appliance is for HOUSEHOLD USE ONLY.

The charger may be plugged into an AC electrical outlet (ordinary household current). Do not use any other electrical outlet.

DO NOT USE THE USB CHARGER IF THE LINE CORD OR PLUG SHOWS ANY DAMAGE

Only use Tru Model P12DUSB050200 US charger (Input:100-240VAC, 50/60Hz, 0.3A, Output:5.0VDC, 2.0A) to charge the hand mixer Model RC-400HMCN. Do not attempt to charge the hand mixer with any other charger.

CHARGER / USB CORD SAFETY TIPS

1. **Never pull or yank on cord.**
2. **To insert the plug, grasp it firmly and guide it into outlet.**
3. **To disconnect, grasp charger and remove it from outlet. Do not pull on the cord.**
4. **Before each charging, inspect the USB cord for cuts and/or abrasion marks. If any are found, this indicates that the USB cord should be replaced.**
5. **Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the charger or charging port on the appliance and cause it to fray and break.**

CORDLESS HAND MIXER FEATURES

1. **High capacity lithium/ion battery**
2. **Light, quiet, convenient and easy to clean**
3. **Easy to charge**
4. **3 operation speeds and 1 off setting**
5. **Beaters and whisk**
6. **Can be stored conveniently with storage rack (provided)**

HAND MIXER



1. STORAGE BASE

2. WHISK ATTACHMENT

3. CHARGING CORD

4. CHARGER ADAPTER

5. MOTOR HOUSING

6. BEATER EJECT BUTTON

7. SPEED CONTROL

8. POWER/CHARGE INDICATOR

9. CHROME BEATERS

PREPARING FOR USE

1. Carefully unpack the hand mixer and all parts. Remove any tape, labels or packaging materials.
2. Wash beaters and whisk with warm, soapy water. Rinse and dry thoroughly.
3. Wipe exterior surfaces of the hand mixer with a soft, moist cloth to remove dust particles collected during packing and handling. **NEVER IMMERSE THE HAND MIXER, USB CORD OR CHARGER IN WATER OR ANY OTHER LIQUID.**
4. Be sure all parts are properly assembled and in place before use.

HOW TO CHARGE

1. The unit cannot be charged when the speed control is on setting 1, 2 or 3. Make sure the speed control is set to 0.
2. Open the charging port on the hand mixer. Attach micro end of cable to the hand mixer.
3. Attach the USB connector to the charger.
4. Plug the charger into the wall outlet.
5. Lights will flash while charging. The lights will stop flashing once the unit is fully charged. See Indicator Light section for details.
Note: The unit is shipped with approximately 30% charge in the batteries. One or two lights will be illuminated during use. The motor housing unit will operate properly without charging. It is recommended to fully charge before first use for best performance.
6. It will take approximately 5 hours to fully charge the motor housing unit.
7. Unit can be charged while stored in the storage base.

ATTACHING BEATERS OR WHISK

Be sure the speed control is in the 0 position, which is off. Align tabs on the beater shaft with the slots in the mixer (motor housing). Push firmly until the beaters lock in place. Beaters can be inserted into either slot.

When using the whisk, use alone and not with a beater. The whisk may be used in either slot.

TO REMOVE BEATERS OR WHISK

Slide the speed control to the 0 (off) position.

Press the beater eject button to eject beaters or whisk.

Note: Do not eject the beater during operation. Slide speed control to 0 and then eject the beaters or whisk.

CAUTION: The mixer will operate if the speed control is pushed forward. Make sure to keep fingers off the speed control while ejecting the beaters or whisk.

HOW TO USE

This hand mixer can be used just like a normal hand mixer but without the cord!

1. After attaching beaters to the mixer, place beaters directly into container holding ingredients to be blended.
2. There are 3 speed settings: 1, 2 and 3, with 1 being the lowest speed setting. Slide the speed control forward to level 1 speed setting. To increase the speed, continue to slide the speed control forward to level 2 or the highest speed level of 3.
3. To decrease the speed, slide the speed control back to a lower number speed setting.
4. Do not use the mixer for longer than 3 minutes at a time. After 3 minutes of continuous use, the unit will automatically shut off. The unit can be operated again after a 5 minute rest cycle. Slide the speed control to 0 and allow the mixer to cool.
5. If ingredients need to be added, slide the speed control to 0 (off). The mixer can be stood on end in the standing position. Add ingredients and then resume mixing.
6. The lights will extinguish as the battery life reduces. A fully charged unit will show all three lights. When only the lowest light is illuminated and flashing, this indicates that the unit needs to be charged.

INDICATOR LIGHTS

The hand mixer indicator lights provide feedback for different situations.

Battery Life During Use:

As the hand mixer is used and the battery begins to drain during performance, the indicator lights will extinguish in sequence from the top to the bottom to indicate how much battery capacity is left.

66% to 100% of capacity: Lights 1, 2 and 3 will all be illuminated

33% to 65% of capacity: Lights 1 & 2 will be illuminated

20% to 32% of capacity: Light 1 will be illuminated

If < 20% of capacity: Light 1 flashes and the unit needs to be charged

Charging Indication:

Indicator lights will also provide feedback during the charging process:

If battery capacity is less than 33%, Lights 1, 2 and 3 will flash while charging.

If battery capacity is within 33%-65%, Light 1 will illuminate solid and Lights 2 and 3 will flash.

If battery capacity is within 66%-99%, Lights 1 and 2 will illuminate solid and only Light 3 will flash.

If battery capacity is greater than 99%, Lights 1, 2 and 3 will illuminate solid.

Overloading Indication:

Note: The hand mixer has an automatic protection system that will not allow overloading. If the load is too large the unit will automatically shut off. It is recommended to not exceed 500g of flour.

If the unit senses an overload situation, all 3 lights will flash 5 times and the unit will turn off. Slide the speed control to 0 and the lights will all be off. Reduce the load on the mixer, allow it to rest for more than 15 minutes and then resume mixing.

Do not expose a battery pack or appliance to fire or excessive heat. Exposure to fire or temperatures above 265°F/130°C may cause an explosion.

USER MAINTENANCE INSTRUCTIONS

This appliance contains no user serviceable parts. Do not try to repair it yourself. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained. Dispose of the appliance at the end of its life span according to local environmental considerations and requirements.

TO CLEAN:

- Eject beaters or whisk from hand mixer. The beaters and whisk attachment are dishwasher safe.
- NEVER immerse hand-held portion of hand mixer (motor housing) in water or any other liquid.
- Wipe hand-held portion of hand mixer with damp cloth and dry.

TO STORE:

- Be sure all parts are clean and dry before storing. Never store hand mixer while it is wet.
- The unit can be stored for up to 3 months with a fully charged battery. If storing for longer than 3 months the unit should be re-charged before using again.
- Ensure the speed control is in the 0 (off) position when storing. Store in a dry area in an ambient temperature of 40°F to 95°F.

ONE YEAR LIMITED WARRANTY

SELECT BRANDS, INC. warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of one (1) year. SELECT BRANDS, INC., at its option, will repair or replace this product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, Select Brands, Inc. will repair or replace the same effecting all necessary parts replacements for a period of one year from the date of purchase.

Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

CONDITIONS: This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. This warranty does not apply to product sold by third party resellers. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centers, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty.

Warranty registration is not necessary to obtain warranty on Select Brands, Inc. products. Save your proof of purchase receipt.

ABOUT YOUR PRODUCT WARRANTY: Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

NORMAL WEAR: This warranty does not cover normal wear of parts or damage resulting from any of the following: Negligent use or misuse of the product; Improper voltage or current; Use contrary to the operation instructions; Deviation from instructions regarding storage and transportation; Repair or alteration by anyone other than SELECT BRANDS, INC. or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

SELECT BRANDS, INC. shall not be liable for any incidental or consequential damages caused by the breach of any express or implied

warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

HOW TO OBTAIN WARRANTY SERVICE: You must contact SELECT BRANDS, INC. Customer Service at 1-913-663-4500. A Customer Service representative will attempt to resolve warranty issues over the phone. If telephone resolution is not possible, the Customer Service representative will require your assistance in performing routine diagnostic procedures. This warranty is effective for the time periods listed above and subject to the conditions provided for in this policy. To register this product and view other fine products, visit us online at www.selectbrands.com.

Made in China
111820

