



Toastmaster

— Quality in the kitchen since 1921 —

UTILITY CAN OPENER

INSTRUCTION MANUAL



 **Toastmaster®**

MODEL TM-109CN

 **90** 90+ YEAR HISTORY
ESTABLISHED 1921

 **GOLD STANDARD**
PRODUCT QUALITY

 **DURABLE BY DESIGN**
BUILT TO LAST

 **INNOVATIVE PRODUCT**
FOUNDED ON CREATIVITY

 **12** **MONTH** **QUALITY GUARANTEED**
1 YEAR LIMITED WARRANTY

IMPORTANT SAFEGUARDS

When using electrical appliances especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. READ ALL INSTRUCTIONS.
2. To protect against electrical shock, do not place cord, plug or appliance in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Do not pull, twist or otherwise abuse cord.
6. Avoid contact with moving parts.
7. Do not operate any electrical appliance with a damaged cord or plug or after appliance malfunctions or has been dropped or damaged in any manner. Return appliance to nearest authorized service facility for examination, repair or adjustment.
8. Do not let power cord hang over edge of a table or countertop (where it can be accidentally pulled) or touch any hot surface.
9. Do not use outdoors or for commercial purposes.
10. Never operate any appliance on top of a non-heat-resistant or flammable surface.
11. Never leave appliance unattended when in use.
12. Do not place appliance on or near a hot gas or electric burner, or in a heated oven or microwave.
13. Use this appliance only for its intended use as described in this manual.
14. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
15. Do not open pressurized (aerosol-type) cans.
16. Do not open cans of flammable liquids such as lighter fluid.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS



This appliance is for HOUSEHOLD USE ONLY. It may be plugged into an AC electrical outlet (ordinary household current). Do not use any other electrical outlet.

CORD PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit fully into a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SHORT CORD INSTRUCTIONS

A short power supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord.

Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply cord or extension cord is used:

- 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and
- 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

LINE CORD SAFETY TIPS

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are

- found, this indicates that the appliance should be serviced and the line cord replaced.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

IMPORTANT

During the first few minutes of initial use, you may notice smoke and/or a slight odor. This is normal and should quickly disappear. It will not recur after appliance has been used a few more times.

USING YOUR CAN OPENER

1. Raise Lever, place arm under the guide bar and against the geared wheel.
2. Press down on lever to pierce lid of can. This automatically starts the cutting action. The can opener will continue to cut until the lid is completely severed from the can.
3. Grasp the can, then raise the lever to release the can.
4. Carefully slide the lid away from the magnet, using caution to avoid being injured by the sharp edge of the lid. **NOTE:** Can opener should be turned off for one minute after operating for 5 minutes.

TO USE THE KNIFE SHARPENER

1. Turn the unit sideways so that the knife sharpener is to the right.
2. Place heel of blade lightly in groove. Apply a slight downward pressure on the blade as it is drawn toward you with a slow, even motion.
3. Repeat procedure 4 or 5 times until desired degree of sharpness is achieved.

SPECIAL ATTENTION

Blades to be sharpened should be clean. Do not sharpen knives that have serrated blades.

USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance and contains no user serviceable parts. Do not try to fix it yourself. Refer it to qualified service personnel if servicing is needed.

TO CLEAN

Unplug unit from electrical outlet. To remove lever, hold can opener facing you. Lift the lever upward and gently pull toward you. Wash lever in warm, soapy water and wipe outside surfaces of unit with a damp cloth. **NEVER IMMERSER UNIT IN WATER.** To replace the lever, hold the can opener facing you with the lever in the lifted position, and put the long pivot into the pivot hole. Be sure to push completely into pivot hold. Then let lever drop back onto top of can opener. If you do not push lever completely into hold, it will not drop back onto top of opener.

TO STORE

Unplug can opener and store in its box or in a dry place. Store the cord in the cord storage compartment at the back of the unit. **Never wrap it tightly around the unit.** Do not put any stress on cord where it enters the appliance as it may cause the cord to fray and possibly break.

ONE YEAR LIMITED WARRANTY

SELECT BRANDS, INC. warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of one (1) year. SELECT BRANDS, INC., at its option, will repair or replace this product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, Select Brands, Inc. will repair or replace the same effecting all necessary parts replacements for a period of one year from the date of purchase.

Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

CONDITIONS: This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centers, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty.

Warranty registration is not necessary to obtain warranty on Select Brands, Inc. products. Save your proof of purchase receipt.

ABOUT YOUR PRODUCT WARRANTY: Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

NORMAL WEAR: This warranty does not cover normal wear of parts or damage resulting from any of the following: Negligent use or misuse of the product; Improper voltage or current; Use contrary to the operation instructions; Deviation from instructions regarding storage and transportation; Repair or alteration by anyone other than SELECT BRANDS, INC. or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

SELECT BRANDS, INC. shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

HOW TO OBTAIN WARRANTY SERVICE: You must contact SELECT BRANDS, INC. Customer Service at 1-913-663-4500. A Customer Service representative will attempt to resolve warranty issues over the phone. If telephone resolution is not possible, the Customer Service representative will require your assistance in performing routine diagnostic procedures. This warranty is effective for the time periods listed above and subject to the conditions provided for in this policy.

To register this product and view other fine products, visit us online at www.selectbrands.com

TOASTMASTER is a Registered Trademark of Applica Consumer Products, Inc., and used under license by Select Brands, Inc.

Made in China
0117