




Toastmaster®

10 X 20"

NONSTICK GRIDDLE

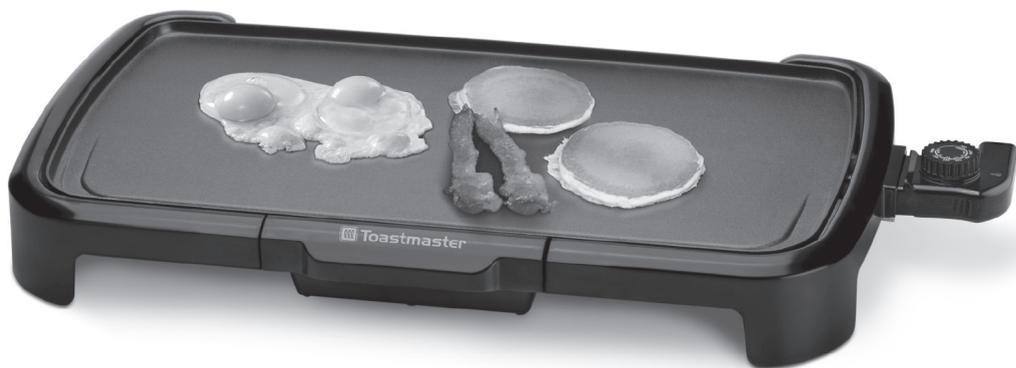

TM-203GR

IMPORTANT SAFEGUARDS


When using electrical appliances especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. READ ALL INSTRUCTIONS.
2. Do not touch hot surfaces. Use any handles or knobs.
3. To protect against electrical shock, do not place control, cord or plug in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning and putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electrical shock or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner or in a heated oven.
11. EXTREME CAUTION MUST BE USED WHEN MOVING AN APPLIANCE CONTAINING HOT OIL OR OTHER HOT LIQUIDS.
12. Always attach the temperature control to the appliance first, then plug the cord into the wall outlet. To disconnect, turn control to OFF then remove plug from wall outlet before detaching temperature control from appliance.
13. Use only with Control Probe Model JH-001A by SELECT BRANDS INC.
14. When plugged into an outlet this appliance should not be left unattended.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS

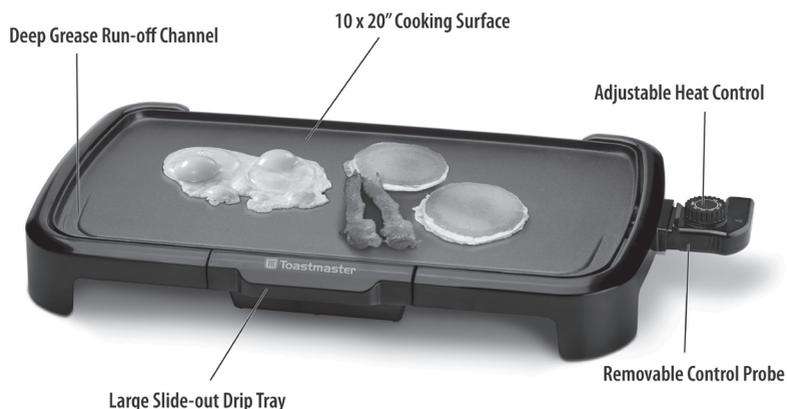

This appliance is for HOUSEHOLD USE ONLY. It may be plugged into an AC electrical outlet (ordinary household current). Do not use any other electrical outlet.

CORD PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SHORT CORD INSTRUCTIONS

A short power supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord.

Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply cord or extension cord is used:

1. **The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and**
2. **The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.**

LINE CORD SAFETY TIPS

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

IMPORTANT

During the first few minutes of initial use, you may notice smoke and/or a slight odor. This is normal and should quickly disappear. It will not recur after appliance has been used a few more times.

BEFORE USING

Solid surface countertops can be easily scratched, cracked, scorched, or damaged, especially when exposed to heat. To prevent damage, the following precautions should be observed when using this product:

- Always use a trivet under heat generating sources such as Griddles, Toaster Ovens, Skillets, etc.
 - Do not place hot pans, pots, ceramic or stoneware inserts, etc. directly on the countertop surface.
1. Carefully unpack the griddle and all parts. Remove all packaging materials, including any stickers or labels.
 2. Wash the griddle in dishwasher or in warm soapy water. The removable drip tray may also be washed in the dishwasher, but should be placed on the TOP RACK ONLY. Rinse and dry parts thoroughly. **DO NOT IMMERSE THE TEMPERATURE CONTROL UNIT OR ALLOW IT TO COME IN CONTACT WITH ANY LIQUID. DO NOT PLACE THE TEMPERATURE CONTROL UNIT IN THE DISHWASHER.**
 3. Season the non-stick cooking surface by rubbing lightly with a cooking oil. Remove excess oil with a paper towel.
 4. Position the griddle on a dry, level, heat-resistant surface. Different countertop finishes and surfaces are effected differently by heat. Use care not to place griddle on any surface where heat may cause a problem. Do not operate the griddle on a finished wood countertop or table.
 5. It is recommended to operate this appliance on a separate outlet and circuit from other appliances to avoid overloading the circuit.

REMOVABLE TEMPERATURE CONTROL PROBE

NOTE: Use Toastmaster Removable Temperature Control Probe Model# JH-001A ONLY. Do not use any other attachment plug or control.

Connecting the Removable Temperature Control Probe:

1. Ensure that the temperature control probe is unplugged from a wall outlet and on the OFF setting before attaching to the griddle. Align the temperature control probe with the terminal post of the griddle.
2. Gently slide the temperature control probe forward until it meets the pan.
3. Before using, ensure the temperature control probe is securely in place and makes intimate contact with the griddle. If the temperature control probe is loose it is not assembled correctly and the griddle will not properly heat.
4. Ensure the dial is in the OFF position.
5. Plug into the wall outlet and then set dial to desired heat level.
6. The griddle is now ready for use.

Disconnecting the Removable Temperature Control Probe:

1. Turn the dial to the OFF setting and unplug the cord from the wall outlet.
2. Allow griddle to cool before disconnecting temperature control probe.
3. Gently pull temperature control probe straight out to avoid any damage to the temperature control probe or the terminal post of the griddle.

HOW TO USE

1. Position the griddle on a dry, level, heat-resistant surface. Different countertop finishes and surfaces are effected differently by heat. Use care not to place griddle on any surface where heat may cause a problem. Do not operate the griddle on a finished wood countertop or table.
2. Make sure the drip tray is properly in place. **DO NOT OPERATE GRIDDLE WITHOUT DRIP TRAY IN PLACE.**
3. Connect the temperature control probe to the griddle according to the instruction in REMOVABLE TEMPERATURE CONTROL PROBE section.
4. Insert plug into wall outlet and rotate the dial to desired temperature setting (see chart below for reference). Allow griddle to preheat approximately 6 to 10 minutes. When griddle reaches selected temperature, the power light will go out.
NOTE: the power light will cycle on and off during cooking process as the thermostat maintains the selected cooking temperature.
5. Prepare food for cooking and place on griddle for time indicated below or in recipe being prepared. Cooking temperature should be adjusted based on a combination of the food being prepared and personal taste preference.
6. When finished cooking, rotate dial to OFF position, unplug from wall outlet and allow griddle to cool before moving, cleaning, storing, taking off or putting on parts.
NOTE: When serving or removing food from griddle use a non-metal heat resistant utensil. NEVER cut foods on the griddle surface.

COOKING TIME AND TEMPERATURE GUIDE

Food	Temperature Setting	Approximate Cooking Time in Minutes
Bacon	325 - 375°F	5 - 8
Canadian Bacon	325 - 375°F	3 - 4
Fish	325 - 375°F	5 - 10
Fried Eggs	275 - 325°F	3 - 5
Grilled Cheese Sandwich	325 - 375°F	5 - 10
Burgers, beef (½" thick) MEDIUM	325 - 375°F	8 - 12
Pancakes	275 - 375°F	2 - 3
Pork Chops (½" thick)	325 - 375°F	15 - 20
Pork Chops (¾" thick)	325 - 375°F	20 - 25
Potatoes	275 - 375°F	10 - 12
Sausage Links	325 - 375°F	20 - 30
Sausage (precooked)	325 - 375°F	10 - 12
Steak, beef (1" thick) MEDIUM	325 - 400°F	10 - 12
Steak, beef (1 ½" thick) MEDIUM	325 - 400°F	18 - 20

CLEANING AND MAINTENANCE

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself.

1. Before cleaning, turn the switch to the OFF position, unplug from outlet and allow to cool. After the appliance has cooled, disconnect the temperature control probe.
2. Before initial use and following each subsequent use, wash the griddle in dishwasher or in warm soapy water. **THE TERMINAL POST ON THE GRIDDLE MUST ALWAYS BE DRY BEFORE USE.** The removable drip tray may also be washed in the dishwasher, but should be placed on the TOP RACK ONLY. Rinse and dry parts thoroughly. **DO NOT IMMERSE THE TEMPERATURE CONTROL UNIT OR ALLOW IT TO COME IN CONTACT WITH ANY LIQUID. DO NOT PLACE THE TEMPERATURE CONTROL UNIT IN THE DISHWASHER.**
3. Clean the non-stick surface with a non-metal cleaning pad. If necessary, firm pressure may be applied. **NEVER USE ABRASIVE CLEANERS OR SCOURING PADS TO CLEAN THE GRIDDLE, AS THOSE MAY DAMAGE THE SURFACES.**

To store, be sure all parts are clean and dry. Store appliance in its box or in a clean, dry place. Never store it while it is hot or wet. Never wrap cord tightly around the appliance; keep it loosely coiled. Use care so that temperature control probe and terminal post on griddle are not damaged during use or when stored.

ONE YEAR LIMITED WARRANTY

SELECT BRANDS, INC. warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of one (1) year. SELECT BRANDS, INC., at its option, will repair or replace this product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, Select Brands, Inc. will repair or replace the same effecting all necessary parts replacements for a period of one year from the date of purchase.

Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

CONDITIONS: This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. This warranty does not apply to product sold by third party resellers. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centers, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty.

Warranty registration is not necessary to obtain warranty on Select Brands, Inc. products. Save your proof of purchase receipt.

ABOUT YOUR PRODUCT WARRANTY: Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

NORMAL WEAR: This warranty does not cover normal wear of parts or damage resulting from any of the following: Negligent use or misuse of the product; Improper voltage or current; Use contrary to the operation instructions; Deviation from instructions regarding storage and transportation; Repair or alteration by anyone other than SELECT BRANDS, INC. or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

SELECT BRANDS, INC. shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

HOW TO OBTAIN WARRANTY SERVICE: You must contact SELECT BRANDS, INC. Customer Service at 1-913-663-4500. A Customer Service representative will attempt to resolve warranty issues over the phone. If telephone resolution is not possible, the Customer Service representative will require your assistance in performing routine diagnostic procedures. This warranty is effective for the time periods listed above and subject to the conditions provided for in this policy.

To register this product and view other fine products, visit us online at www.selectbrands.com

TOASTMASTER is a Registered Trademark of Applica Consumer Products, Inc., and used under license by Select Brands, Inc.

Made in China
1114

