



Toastmaster

—Quality in the kitchen since 1921—

DOUBLE BURNER

INSTRUCTION MANUAL



 **Toastmaster®**

MODEL TM-20DB

 **90** 90+ YEAR HISTORY
ESTABLISHED 1921

 **GOLD STANDARD**
PRODUCT QUALITY

 **DURABLE BY DESIGN**
BUILT TO LAST

 **INNOVATIVE PRODUCT**
FOUNDED ON CREATIVITY

 **12** months **QUALITY GUARANTEED**
1 YEAR LIMITED WARRANTY

IMPORTANT SAFEGUARDS


When using electrical appliances especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. READ ALL INSTRUCTIONS.
2. Do not touch hot surfaces. Metal parts can become hot. Use any handles or knobs. All chrome surfaces become extremely hot.
3. To protect against electrical shock, do not place cord, plug or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning.
6. Do not pull, twist or otherwise abuse cord.
7. Do not operate any electrical appliance with a damaged cord or plug or after appliance malfunctions or has been dropped or damaged in any manner. Return appliance to nearest authorized service facility for examination, repair or adjustment.
8. Do not let power cord hang over edge of a table or countertop (where it can be accidentally pulled) or touch any hot surface.
9. Do not use outdoors or for commercial purposes.
10. Never operate any appliance on top of a non-heat-resistant or flammable surface.
11. Never leave appliance unattended when in use.
12. Do not place appliance on or near a hot gas or electric burner, or in a heated oven or microwave.
13. Use this appliance only for its intended use as described in this manual.
14. Do not use attachments that are not recommended by the manufacturer; they may cause injury.
15. Never move this appliance while in use or while any vessel containing hot oil or other hot liquids is on the appliance.
16. Do not use this appliance for other than intended use.
17. To disconnect, turn all controls to the 12 o'clock position, then remove plug from the wall outlet.
18. FOR HOUSEHOLD USE ONLY.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS

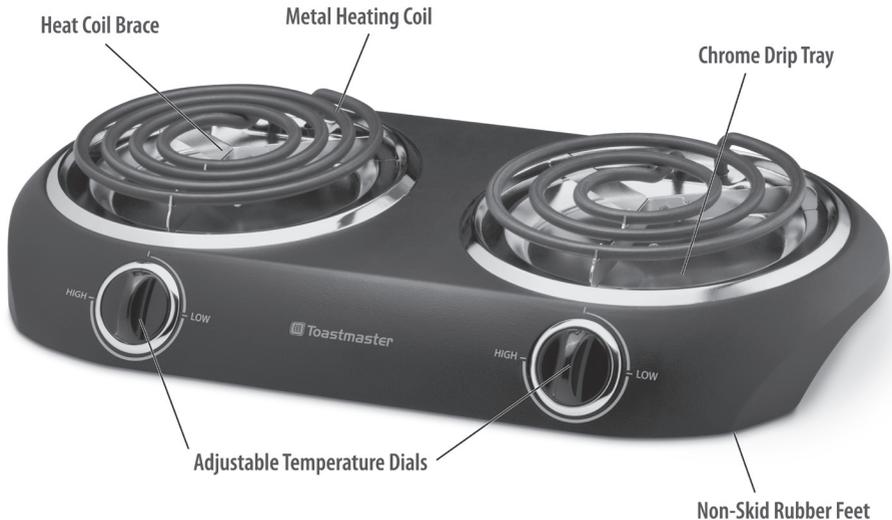

This appliance is for HOUSEHOLD USE ONLY. It may be plugged into an AC electrical outlet (ordinary household current). Do not use any other electrical outlet.

CORD PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

LINE CORD SAFETY TIPS

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

A short power supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord. Extension cords are available and may be used if care is exercised in their use. If an extension cord is used:

1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and

2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

IMPORTANT

During the first few minutes of initial use, you may notice smoke and/or a slight odor. This is normal and should quickly disappear. It will not recur after appliance has been used a few more times.

USING YOUR BURNER

Solid surface countertops can be easily scratched, cracked, scorched, or damaged, especially when exposed to heat. To prevent damage, the following precautions should be observed when using this product:

- Always use a trivet under heat generating sources such as Slow Cookers, Toaster Ovens, Skillets, Burners or any kitchen appliance.

Before using, operate the burner in order to burn off residue on the heating elements. When doing this, it is suggested the HIGH heat setting be used.

HOW TO USE: Place on a flat, smooth countertop surface. Be sure to place it in a safe area where it will not fall or be pulled on by the cord, and provide at least 4 to 6 inches of space above and around the unit for proper air circulation.

CAUTION: Never operate the unit in a tilted position, or if the heating element is not properly in position. Plug unit into electrical wall outlet and turn the variable temperature control to the desired heat setting. For best results, allow unit to heat for approximately one minute before placing pot or pan on the burner. It is recommended to use pots or pans that are essentially the same size as the burner. When using, the pot or pan should be placed in the center of the burner. The burner operates similar to a stove-top burner. To boil water, set the variable temperature control to the HIGH setting. To heat pre-cooked food, select the lower heat settings.

NOTE: Always turn temperature control dial to the 12 o'clock position and unplug when not in use.

USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. It contains no user servicable parts. Do not try to repair it yourself. Refer it to qualified personnel if servicing is needed.

TO CLEAN: Turn the temperature control dial to the 12 o'clock position, unplug from outlet, and allow to cool completely before cleaning.

NOTE: NEVER IMMERSER UNIT IN WATER OR ANY OTHER LIQUID. NEVER USE STEEL WOOL OR ABRASSIVE CLEANERS, AS THEY MAY SCRATCH THE SURFACE OR DAMAGE THE UNIT.

The base, heating element and drip pan may be wiped with a soft, slightly damp cloth or sponge. Drip pan may be reached by lifting and tilting the heating element. A mild dishwashing soap may be used to remove food soils on the base and drip pan; soap residue should be wiped clean with a damp cloth. After cleaning the unit, food residue may be burned off of the heating element by operating the variable temperature control at the HIGH heat setting for approximately five minutes.

TO STORE: Unplug the unit and allow it to cool completely before storing. Store the item in its box or in a clean, dry place. Never wrap cord tightly around the appliance. Do not put stress on the cord where it enters the unit, as it could cause the cord to fray and break.

ONE YEAR LIMITED WARRANTY

SELECT BRANDS, INC. warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of one (1) year. SELECT BRANDS, INC., at its option, will repair or replace this product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, Select Brands, Inc. will repair or replace the same effecting all necessary parts replacements for a period of one year from the date of purchase.

Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

CONDITIONS: This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centers, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty.

Warranty registration is not necessary to obtain warranty on Select Brands, Inc. products. Save your proof of purchase receipt.

ABOUT YOUR PRODUCT WARRANTY: Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

NORMAL WEAR: This warranty does not cover normal wear of parts or damage resulting from any of the following: Negligent use or misuse of the product; Improper voltage or current; Use contrary to the operation instructions; Deviation from instructions regarding storage and transportation; Repair or alteration by anyone other than SELECT BRANDS, INC. or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

SELECT BRANDS, INC. shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

HOW TO OBTAIN WARRANTY SERVICE: You must contact SELECT BRANDS, INC. Customer Service at 1-913-663-4500. A Customer Service representative will attempt to resolve warranty issues over the phone. If telephone resolution is not possible, the Customer Service representative will require your assistance in performing routine diagnostic procedures. This warranty is effective for the time periods listed above and subject to the conditions provided for in this policy.

To register this product and view other fine products, visit us online at www.selectbrands.com

TOASTMASTER is a Registered Trademark of Applica Consumer Products, Inc., and used under license by Select Brands, Inc.

Made in China
2914

