



# ToasterMaster®

PERSONAL  
BLENDER



TM-3MBL



# IMPORTANT SAFEGUARDS

When using electrical appliances especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. READ ALL INSTRUCTIONS.
2. To protect against electrical shock, do not place motor base, cord or plug in water or other liquid.
3. This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance.
4. Make sure appliance is OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of attachments, including canning jars, not recommended by the manufacturer may cause a risk of injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner or in a heated oven.
11. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the unit. A scraper may be used, but must be used only when the personal blender is not running.
12. Blades are sharp. Handle carefully.
13. Always operate the blender with the cover (lid) in place.
14. Never add to container while appliance is operating.
15. Do not blend hot liquids.
16. Container must be properly in place before operating appliance.
17. Do not use appliance for other than intended use.
18. To disconnect, remove plug from wall outlet.
19. FOR HOUSEHOLD USE ONLY

# SAVE THESE INSTRUCTIONS

# OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS



This appliance is for **HOUSEHOLD USE ONLY**. It may be plugged into an AC electrical outlet (ordinary household current). Do not use any other electrical outlet.

## CORD PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## SHORT CORD INSTRUCTIONS

A short power supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord.

**Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply cord or extension cord is used:**

1. **The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and**
2. **The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.**

## LINE CORD SAFETY TIPS

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

**DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.**

### **IMPORTANT**

During the first few minutes of initial use, you may notice smoke and/or a slight odor. This is normal and should quickly disappear. It will not recur after appliance has been used a few more times.

## **BEFORE USING**

1. Carefully unpack the personal blender and all parts. Remove all packaging materials, including any stickers or labels.
2. Wash the travel cup, lid and blade in warm soapy water. **DO NOT IMMERSSE THE BASE (MOTOR HOUSING) IN WATER.**
3. Care should be taken when cleaning the blades, as the blades are sharp.
4. Position the personal blender base on a dry, level, heat-resistant surface and assemble according to instructions.
5. It is recommended to operate this appliance on a separate outlet and circuit from other appliances to avoid overloading the circuit.

### **SPECIAL INSTRUCTIONS:**

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

## **HOW TO USE**

**WARNING:** ALWAYS unplug the personal blender before assembling, disassembling, cleaning or storing.

1. Position the base on a dry, flat and level surface.
2. Fill the cup with contents you wish to blend, but do not overload: Attach lid.
3. Align the unlock icon over the arrow on the base and place the cup onto the base. Turn the cup counterclockwise until the lock icon is aligned with the arrow on the base and the cup locks into position. **NOTE:** The personal blender will not operate unless the cup is properly locked into place.
4. Insert plug into wall outlet.
5. Press and hold the Pulse Button to blend ingredients. Release and repeat until desired blending results are achieved. When you release the Pulse Button, the personal blender will turn off and the blender will stop operating.
6. Wait until the blades stop completely before removing the cup.
7. Unplug from outlet when not in use.

## CARE AND CLEANING

**CAUTION:** Make sure the personal blender is unplugged from the power source before inserting or removing any attachments and before cleaning.

### **TO CLEAN**

- DO NOT immerse the base into water or any other liquid. Clean with a damp sponge or cloth and wipe dry.
- The Travel Cup, Lid, and Blade may be cleaned in the upper basket of the dishwasher or with warm, soapy water.
- Use extreme caution when cleaning the Blades as they are very sharp.
- NEVER USE ABRASIVE CLEANERS OR SCOURING PADS TO CLEAN, AS THOSE MAY DAMAGE THE SURFACES.

To store, be sure all parts are clean and dry. Store appliance in its box or in a clean, dry place. Never store it while it is hot or wet. Never wrap cord tightly around the appliance; keep it loosely coiled or use the convenient cord wrap.

## MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Any servicing requiring disassembly must be performed by a qualified appliance repair technician.

# ONE YEAR LIMITED WARRANTY

SELECT BRANDS, INC. warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of one (1) year. SELECT BRANDS, INC., at its option, will repair or replace this product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, Select Brands, Inc. will repair or replace the same effecting all necessary parts replacements for a period of one year from the date of purchase.

Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

**CONDITIONS:** This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. This warranty does not apply to product sold by third party resellers. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centers, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty.

Warranty registration is not necessary to obtain warranty on Select Brands, Inc. products. Save your proof of purchase receipt.

**ABOUT YOUR PRODUCT WARRANTY:** Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

**NORMAL WEAR:** This warranty does not cover normal wear of parts or damage resulting from any of the following: Negligent use or misuse of the product; Improper voltage or current; Use contrary to the operation instructions; Deviation from instructions regarding storage and transportation; Repair or alteration by anyone other than SELECT BRANDS, INC. or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

SELECT BRANDS, INC. shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

**HOW TO OBTAIN WARRANTY SERVICE:** You must contact SELECT BRANDS, INC. Customer Service at 1-913-663-4500. A Customer Service representative will attempt to resolve warranty issues over the phone. If telephone resolution is not possible, the Customer Service representative will require your assistance in performing routine diagnostic procedures. This warranty is effective for the time periods listed above and subject to the conditions provided for in this policy.

TOASTMASTER is a Registered Trademark of Spectrum Brands, Inc., and used under license by Select Brands, Inc.

Printed in China  
030419

