



Toastermaster®

4 SLICE
DIGITAL TOASTER



TM-48TS

IMPORTANT SAFEGUARDS

When using electrical appliances especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. READ ALL INSTRUCTIONS.
2. Do not touch hot surfaces. Metal parts can become hot. Use any handles or knobs.
3. To protect against electrical shock, do not immerse cord, plug or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Do not attempt to dislodge food when toaster is plugged in.
6. Oversize foods, metal foil packages, or utensils must not be inserted into a toaster as they may involve a risk of fire or electrical shock.
7. A fire may occur if toasters are covered or touching flammable material including curtains, draperies, walls and the like, when in operation.
8. Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning, putting on or removing parts.
9. Clean out accumulated crumbs frequently to avoid risk of fire or toaster malfunction. Unplug while not in use and before cleaning.
10. Do not operate any electrical appliance with a damaged cord or plug or after appliance malfunctions or has been dropped or damaged in any manner. Return appliance to nearest authorized service facility for examination, repair or adjustment.
11. Do not let power cord hang over edge of a table or countertop (where it can be accidentally pulled) or touch any hot surface.
12. Do not use outdoors or for commercial purposes.
13. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
14. Never operate any appliance on top of a non-heat-resistant or flammable surface.
15. Never leave appliance unattended when in use.
16. Do not place appliance on or near a hot gas or electric burner, or in a heated oven or microwave.
17. Do not use this appliance for other than intended use.
18. The use of accessory attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
19. Do not use foods that will drip coatings or fillings when heated. Such accumulations inside the toaster create unsanitary conditions and the possibility of fire or toaster malfunction.
20. To disconnect, cancel the toasting cycle and unplug from wall outlet.
21. When heating toaster pastries, always use the lightest toast color setting.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS



This appliance is for HOUSEHOLD USE ONLY. It may be plugged into an AC electrical outlet (ordinary household current). Do not use any other electrical outlet.

CORD PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SHORT CORD INSTRUCTIONS

A short power supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord.

Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply cord or extension cord is used:

1. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and
2. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

LINE CORD SAFETY TIPS

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

IMPORTANT

During the first few minutes of initial use, you may notice smoke and/or a slight odor. This is normal and should quickly disappear. It will not recur after appliance has been used a few more times. To help burn any residue off of the heating elements, run a single toast cycle on the lightest setting without inserting bread.

USING YOUR TOASTER

Solid surface countertops can be easily scratched, cracked, scorched, or damaged, especially when exposed to heat. To prevent damage, the following precautions should be observed when using this product:

- Before use remove any packing materials and wipe the body of your toaster with a damp cloth.
- Ensure that before plugging the toaster into the outlet, the bread carriage lever is in the uppermost position.
- Plug the cord into a 120 volt, 60 HZ AC outlet. When plugged in, the digital control interface will blink for three seconds then remain illuminated and display the default shade setting and time. After one minute of inactivity, the digital display will turn off.
- Rotate the browning dial to the desired level of darkness from 1 to 6 with 1 being the lightest setting and shortest toast time.
- The below icons show the shade settings and amount of toast time when using the toaster for a first toast cycle. Because of the internal thermostat, a subsequent cycle with a preheated toaster may display and utilize a different toast time.



- If using the **BAGEL**, **FROZEN** or **REHEAT** function, press the corresponding function button before pressing the lever down.
- **BAGEL FUNCTION:** Only the inner elements operate so the sliced side is more toasted and the outside of the bagel is warmed.
- **FROZEN:** The FROZEN setting adds an additional 30 seconds of toast time to the preset times.
- **REHEAT:** The REHEAT setting toasts for 30 seconds only to warm or reheat a previously toasted food.

- Press the lever down until it latches. The bread guides will automatically center the bread for browning. The timer in the digital display will start counting down once the lever is engaged. During the first 10 seconds, it is possible to adjust the shade selection by rotating the browning dial.
- NOTE: The lever will not stay down if toaster is not plugged in.
- When the display timer reaches "0:00", the bread will pop up automatically and is ready for removal from the slots.
- To remove toasted foods, lift up on the lever to raise the toasted foods from the bread slots.
- To remove jammed toast, unplug toaster and remove bread once toaster has cooled down. Never insert fingers or metallic utensils into slots.
- **CANCEL FUNCTION:** To interrupt the toasting cycle, press the CANCEL button. This will stop the toasting cycle and the toaster foods will pop up (and the toaster will switch off).

HINTS AND TIPS

- Most types of breads and pastries can be toasted, such as bagels, tea cakes, thick sliced breads, English muffins, waffles, etc. Slices should not, however, be so thick as to cause burning or jamming in the bread slots.
- **NEVER** force the carriage up manually to cancel the toasting cycle. This may cause damage to the toaster.
- **DO NOT WRAP THE CORD AROUND THE MAIN BODY OF APPLIANCE DURING OR AFTER USE.**

CAUTION: Due to possible risk of fire, do not cook toaster pastries in this toaster. Use a toaster oven instead. If a toaster must be used:

- **Never** use cracked or broken pastries.
- **Never** leave unattended.
- **Always** use the lightest setting.
- **Always** supervise children. Fillings can become very hot and can cause burns.

CARE AND CLEANING

This appliance requires little maintenance. It contains no user-serviceable parts. Do not attempt to repair it yourself. Any servicing that requires disassembly, other than cleaning, must be performed by a qualified appliance repair technician.

After use and before cleaning, unplug from wall outlet and wait for the toaster to cool.

Wipe the outside of the toaster with a damp cloth and dry with another cloth or paper towel. Do not use abrasive cleaners.

To avoid damage to toaster heating elements, do not use any pointed or sharp articles for cleaning the inside of the toaster.

CRUMB TRAYS: Empty the crumb trays frequently. Crumbs will accumulate in the crumb trays and could catch fire if not emptied periodically. When the toaster has cooled down completely, tap the sides of the toaster lightly to dislodge any crumbs caught inside and slide out the removable crumb trays. Wipe away excess crumbs from the crumb trays. Replace crumb trays prior to using the toaster.

ONE YEAR LIMITED WARRANTY

SELECT BRANDS, INC. warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of one (1) year. SELECT BRANDS, INC., at its option, will repair or replace this product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, Select Brands, Inc. will repair or replace the same effecting all necessary parts replacements for a period of one year from the date of purchase.

Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

CONDITIONS: This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. This warranty does not apply to product sold by third party resellers. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centers, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty.

Warranty registration is not necessary to obtain warranty on Select Brands, Inc. products. Save your proof of purchase receipt.

ABOUT YOUR PRODUCT WARRANTY: Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

NORMAL WEAR: This warranty does not cover normal wear of parts or damage resulting from any of the following: Negligent use or misuse of the product; Improper voltage or current; Use contrary to the operation instructions; Deviation from instructions regarding storage and transportation; Repair or alteration by anyone other than SELECT BRANDS, INC. or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

SELECT BRANDS, INC. shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

HOW TO OBTAIN WARRANTY SERVICE: You must contact SELECT BRANDS, INC. Customer Service at 1-913-663-4500. A Customer Service representative will attempt to resolve warranty issues over the phone. If telephone resolution is not possible, the Customer Service representative will require your assistance in performing routine diagnostic procedures. This warranty is effective for the time periods listed above and subject to the conditions provided for in this policy.

TOASTMASTER is a Registered Trademark of Spectrum Brands Inc., and used under license by Select Brands, Inc.

