




# Toastmaster®

1.7 LITER

KETTLE

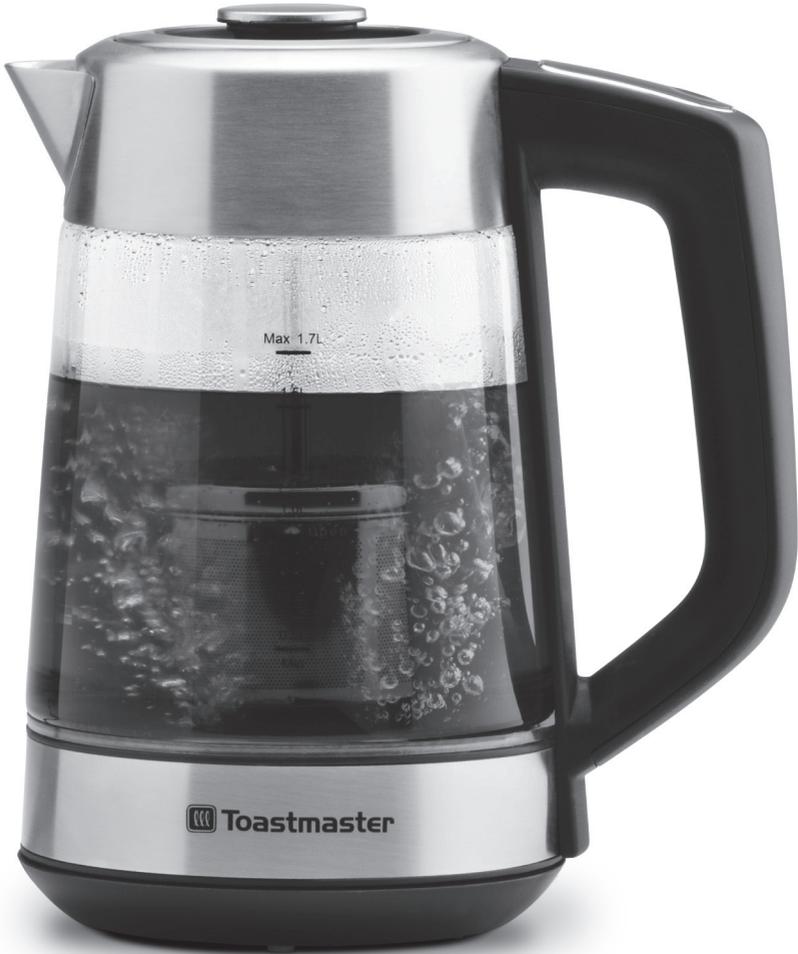

TM-798KE

# IMPORTANT SAFEGUARDS


When using electrical appliances especially when children are present, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. READ ALL INSTRUCTIONS.
2. Do not touch hot surfaces. Use any handles or knobs.
3. To protect against fire, electrical shock, or injury to persons DO NOT immerse cord, plug or appliance in water or other liquid.
4. Never leave the appliance unattended while in use.
5. This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge. Close supervision is necessary when any appliance is used near children. Children should be supervised to ensure that they do not play with the appliance.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning.
7. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
8. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons. Do not use any other kettle base with this product.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter or touch hot surfaces.
11. Do not place on or near a hot gas or electric burner, or in a heated oven or on top of other electrical appliances. Electric kettle must be operated on a flat, dry, heat resistant surface.
12. Extreme caution must be used when moving an appliance containing hot food, hot oil, water or other hot liquids.
13. Do not use appliance for other than intended use.
14. Always attach the plug to the appliance first and then plug cord into the wall outlet. To disconnect, press the power button, then remove plug from wall outlet.
15. The lid on the kettle must be closed when operating. Scalding may occur if the lid is opened during the boiling cycle.
16. Fill this appliance with water only. Do not fill with other liquids or foods. Do not operate kettle if the water level is above the max marking (1.7L) or below the minimum marking (0.5L).
17. Do not fill the kettle when positioned on the base. Dry any water from the bottom of the kettle or the switch before placing on base.

# SAVE THESE INSTRUCTIONS

# OPERATING INSTRUCTIONS

PRODUCT MAY VARY SLIGHTLY FROM ILLUSTRATIONS

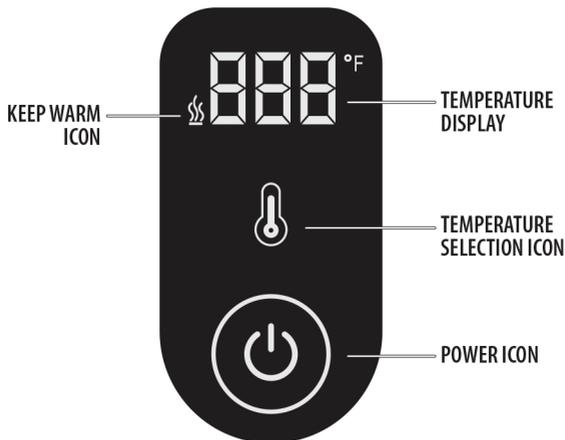

This appliance is for HOUSEHOLD USE ONLY. It may be plugged into an AC electrical outlet (ordinary household current). Do not use any other electrical outlet.

A short power supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord. Extension cords are available and may be used if care is exercised in their use. If an extension cord is used:

1. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and
2. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

## **CORD PLUG**

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

## **LINE CORD SAFETY TIPS:**

1. Never pull or yank on cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet. Do not pull on the line cord.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced.
5. Never wrap the cord tightly around the appliance, as this could place undo stress on the cord where it enters the appliance and cause it to fray and break.

**DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.**

## **IMPORTANT:**

During the first few minutes of initial use, you may notice smoke and/or a slight odor. This is normal and should quickly disappear. It will not recur after appliance has been used a few more times.

1. Carefully unpack the kettle. Remove any tape, labels or packaging materials.
2. Rinse the interior of the kettle with warm, soapy water. Rinse well and dry thoroughly.
3. Wipe exterior surfaces of the product and base with a soft, moist cloth to remove dust particles collected during packing and handling. **NEVER IMMERSER THE KETTLE, BASE, CORD OR PLUG IN WATER OR ANY OTHER LIQUID.** The electrical connections or the switch should also not contact water.
4. **NEVER** use harsh chemicals or abrasive cleaners on the kettle or any other parts.
5. Place kettle on a dry, level, heat-resistant surface.

## **BEFORE FIRST USE:**

Before the first use, the kettle should be cleaned thoroughly. Run through the boil cycle at least 2 times and discard boiled water before consumption.

## **BOILING WATER:**

1. Place the kettle and base on a dry, level and heat-resistant surface.
2. Remove the kettle from the base.
3. Lift off the lid and fill the kettle with cool water between the minimum & maximum markings. Do not fill over the maximum marking. Close the lid by pressing down on the stainless steel lid cap. Ensure that it snaps into place.
4. Connect the cord plug into a 120V AC wall outlet and position the kettle on the base.

**NOTE:** The kettle should be operated on an electrical circuit that will not be

- overloaded by other electric appliances.
5. Press the power icon with finger indent on the control panel at the top of the handle and the display will light up and show the current water temperature. Tap the power icon once and the kettle will automatically set to the default temperature of 212°F. The color-changing temperature lights will illuminate inside the kettle to indicate that the heating cycle has begun.
  6. When the water temperature reaches a boil or reaches desired heat, the kettle will beep three times and automatically shut off.
  7. Pour the hot water into a heat resistant container.

**IMPORTANT: This kettle has a Keep Warm feature that can be used with the variable temperature setting. The maximum temperature for the keep warm setting is 194° F. If this feature has accidentally been set then you will not be able to set the kettle to 212° F. Press and hold the power icon for two seconds and the keep warm icon will disappear to indicate the feature has been disabled.**

**CAUTION: Use care when moving kettle and pouring hot water. Danger of scalding.**

#### **BREWING TEA:**

1. Fill the kettle with desired amount of cool water. Twist open stainless steel infuser basket and place contents of loose leaf tea or tea bags inside basket. Replace basket onto kettle lid by twisting back into locked position. Reposition lid onto tea kettle with infuser basket inside.
2. Select preset temperature and press power button to begin heating water.
3. Note that the infuser basket is retractable- it may be lifted up out of the water by gently raising the stainless steel lid cap.
4. **CAUTION: Allow infuser basket to completely cool before removing from kettle or handling. Additionally, allow unit to completely cool before removing tea leaves or bags from infuser basket.**

**CAUTION: The kettle is hot during use. DO NOT touch.**

**CAUTION: Never leave the kettle unattended when boiling water or after water has been boiled.**

**CAUTION: Never operate the kettle dry (without water).**

**NOTE:** The boiling cycle may be interrupted at any time by removing the kettle from the base or by pressing the power icon.

#### **SELECTING TEMPERATURE PRESETS:**

1. Press the power icon to turn on kettle.
2. Tap the temperature icon to change the temperature from the 212°F default temperature. The display will show the temperatures starting from 102°F up to 212°F in 10°F increments with each tap of the temperature icon. .
3. Once desired temperature has been selected, press power icon again to start heating.
4. Kettle will beep three times when desired temperature has been reached.
5. If the kettle is lifted off the base and returned within 60 seconds during the boiling cycle, the kettle will continue to boil the water.

## KETTLE TEMPERATURE AND COLOR GUIDE

The kettle light colors correspond to the following temperatures:

Temperature	Kettle Light Colors
Below 50°C / 122°F	light blue
50°C / 122°F	green
60°C / 140°F	dark blue
70°C / 158°F	purple
80°C / 176°F	yellow
90°C / 194°F to boiling	red

### KEEP WARM FEATURE:

The Keep Warm feature can be used at all temperatures except for 212°F, which is boiling. The maximum temperature for the keep warm function is 194°F. To set the keep warm function, press and hold the power icon for 2 seconds instead of tapping it. When the keep warm setting has been enabled, the icon will be displayed on the left hand side of the temperature display. The keep warm function will remain active for two hours if the kettle remains on the base. If the kettle is lifted off the base and returned within 60 seconds, the keep warm function will continue.

## USER MAINTENANCE INSTRUCTIONS

This appliance contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified service personnel if servicing is needed. The kettle should be cleaned on a regular basis to prolong the life and to guarantee optimal performance.

### TO CLEAN:

- Rinse the interior of the kettle with warm, soapy water. Rinse well and dry thoroughly.
- Wipe exterior surfaces of the product and base with a soft, moist cloth.
- NEVER IMMERSE THE KETTLE, BASE, CORD OR PLUG IN WATER OR ANY OTHER LIQUID. The electrical connections or the switch should also not contact water and should be dried thoroughly.
- NEVER use harsh chemicals or abrasive cleaners on the kettle or any other parts.

### DESCALING:

- Descaling the kettle is recommended on a monthly basis, or more frequently if using hard water.
- To descale with white vinegar, fill the kettle with 0.5L of white vinegar. Allow to stand 1 hour without heating. Empty the kettle and rinse 5 to 6 times. Run a full boil cycle and empty the kettle.
- To descale with a descaling solution, follow the directions from the descaling manufacturer.

### TO STORE:

- Be sure all parts are clean and dry before storing. Store appliance in its box or in a clean, dry place. Never store it while it is hot or wet. Never wrap cord tightly around the appliance; the line cord should be wrapped around the cord storage underneath the base.
- **ALWAYS** store the kettle in an upright position.

# ONE YEAR LIMITED WARRANTY

SELECT BRANDS, INC. warrants, subject to the conditions stated below, that from the date of purchase, this product will be free from mechanical defects for a period of one (1) year. SELECT BRANDS, INC., at its option, will repair or replace this product found to be defective during the warranty period. Should this product become defective by reason of improper workmanship or material defect during the specified warranty period, Select Brands, Inc. will repair or replace the same effecting all necessary parts replacements for a period of one year from the date of purchase.

Transportation charges on parts, or products in whole, submitted for repair or replacement, under this warranty, must be borne by the purchaser.

**CONDITIONS:** This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. This warranty does not apply to product sold by third party resellers. Keep the original sales receipt. Proof of purchase is required to obtain warranty service or replacement. Dealers, service centers, or retail stores do not have the right to alter, modify or in any way, change the terms and conditions of this warranty.

Warranty registration is not necessary to obtain warranty on Select Brands, Inc. products. Save your proof of purchase receipt.

**ABOUT YOUR PRODUCT WARRANTY:** Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty service would NOT apply if the product damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, the warranty is void if the manufacturing date or the serial number on the product has been removed or the equipment has been altered or modified. During the warranty period, the authorized service dealer, at its option, will repair or replace any part that, upon examination, is found to be defective under normal use and service.

**NORMAL WEAR:** This warranty does not cover normal wear of parts or damage resulting from any of the following: Negligent use or misuse of the product; Improper voltage or current; Use contrary to the operation instructions; Deviation from instructions regarding storage and transportation; Repair or alteration by anyone other than SELECT BRANDS, INC. or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

SELECT BRANDS, INC. shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

**HOW TO OBTAIN WARRANTY SERVICE:** You must contact SELECT BRANDS, INC. Customer Service at 1-913-663-4500. A Customer Service representative will attempt to resolve warranty issues over the phone. If telephone resolution is not possible, the Customer Service representative will require your assistance in performing routine diagnostic procedures. This warranty is effective for the time periods listed above and subject to the conditions provided for in this policy.

TOASTMASTER is a Registered Trademark of Spectrum Brands, Inc., and used under license by Select Brands, Inc.

100120

